

- **EW1025** Drench Hose Unit, Wall Mounted
- **EW1025BP** Drench Hose Unit, Wall Mounted, with Backflow Preventer

**APPLICATION:** Drench hose unit for wall mounting. Ideal for rinsing any part of user's eye, face or body. *Note: Under ANSI Z358.1 - 2004, drench hose units supplement, but do not replace, other types of emergency equipment.*

**SPRAY HEAD:** Single FS-Plus™ spray head. Spray head has “flip top” dust cover, internal flow control and filter to remove impurities from the water flow.

**VALVE:** Forged brass squeeze valve activated by stainless steel lever handle. Valve has replaceable stainless steel seat for exceptional durability. Valve closes when lever handle is released.

**HOSE:** 8' reinforced PVC hose. 300 PSI maximum working pressure.

**MOUNTING:** Wall mounted hook holds unit on wall.

**BACKFLOW PREVENTER:** In-line dual check backflow preventer installed on inlet of hose (EW1025BP only). *Note: Check with code authority for compliance with local plumbing code.*

**SUPPLY:** 3/8" NPT male swivel-type inlet.

**SIGN:** ANSI-compliant identification sign.


**QUALITY ASSURANCE:** Unit is completely assembled and water tested prior to shipment.

### Available Options

- **DC** Stainless steel dust cover for spray head.
- **FSH** 8 ft. flexible stainless steel hose in place of PVC hose.
- **LC** Locking clip for valve handle. Valve stays open until locking clip is released.
- **VB** In-line vacuum breaker for installation between valve and spray head.
- **TMV** AP3600 thermostatic mixing valve precisely blends hot and cold water to deliver warm (tepid) water as required by ANSI Z358.1-2004. Refer to “Tempering Units” section for complete technical and product selection information.



- **EW1025** Drench Hose Unit, Wall Mounted
- **EW1025BP** Drench Hose Unit, Wall Mounted, with Backflow Preventer

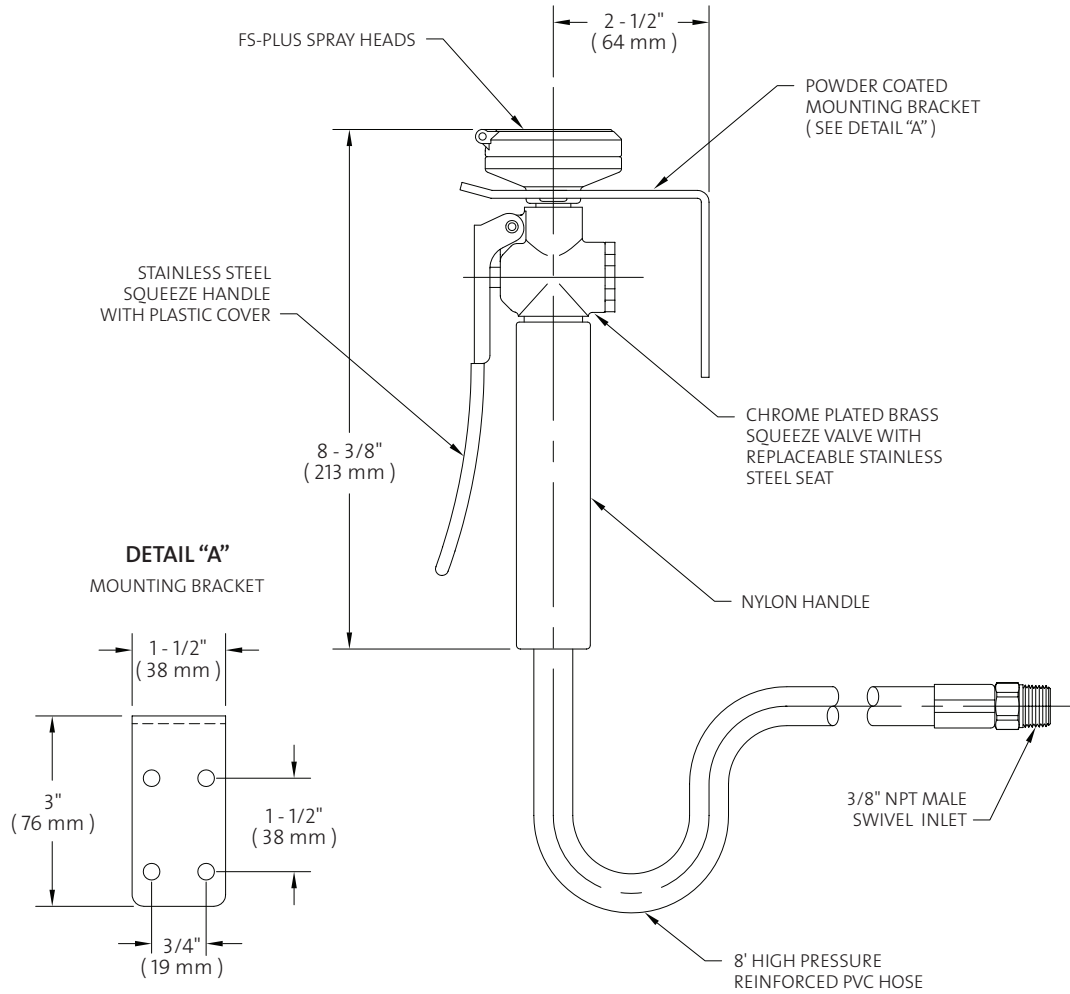

**NOTES:**

1. FS-PLUS SPRAY HEAD HAS A "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
2. HOSE SHOULD NOT BE USED IN APPLICATIONS WHERE WATER PRESSURE EXCEEDS 90 PSI. HOSE SHOULD BE INSPECTED PERIODICALLY FOR DETERIORATION.

THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are ± 1/4" (6mm). rev. 0308

**Sign Included**

